 


Switch 2 Afterglow Wired Controller

Quick Start Guide

Initial Setup

 
- A. To use the controller, plug the USB cable into the Nintendo Switch 2 dock. The controller should automatically pair with the device.
- B. If the controller does not pair automatically, go into System Settings > Controller and Accessories > Change Grip/Order.
- C. When prompted, press L and R on your controller to connect.
 - Note: You can also pair the controller directly from the Controllers Menu found on the Nintendo Switch 2 Home Screen and select Change Grip/Order.

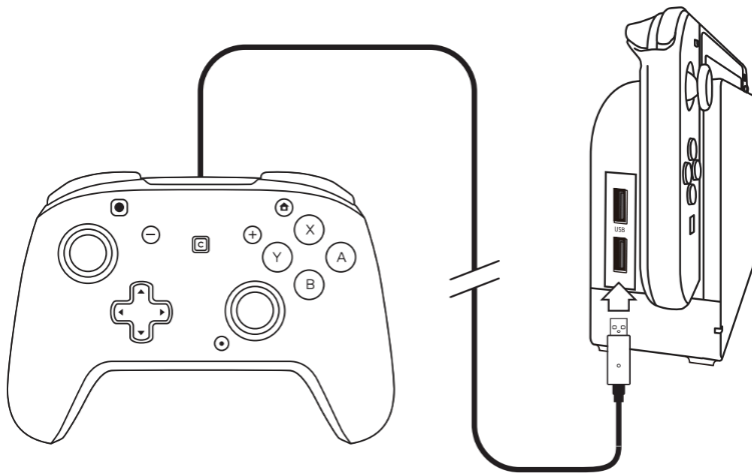

Audio Setup


- A. Plug the 3.5mm jack of your headset or headphones directly into the 3.5mm port on the controller.
 - Note: The Nintendo Switch 2 only supports one audio output at a time. When connecting your headset/headphones into the controller, audio via HDMI connected devices (i.e. TV, amp, etc.) will be disabled. When connecting more than one USB audio device, only the first device will have audio output.
- B. You will be prompted by the Nintendo Switch 2 to reconnect the controller. Press L and R to connect and then audio will start playing through the headset/headphones.
- C. If you do not hear sound after reconnecting your controller, please go to the Nintendo Switch 2 OS settings to make sure the volume is above 0%.
 - Note: Under the System Settings, there's an audio setting called "Mute when Headphones are Disconnected" that can be enabled. When activated, this option will shut off the system speakers when unplugging or disconnecting a headset until the volume buttons are pressed, or until this setting is manually turned off. To disable this

setting manually, select System Settings > System > Mute when Headphones are Disconnected (turn to off).

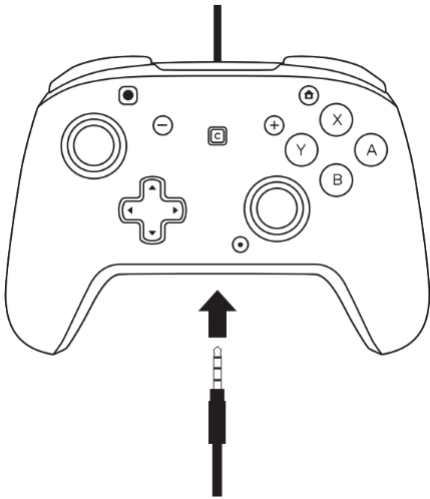

Control Volume


 
- A. To adjust the controller's volume, hold down the "function" button and press the Up/Down on the D-pad. You can easily mute your connected headset/headphone's mic by pressing the "function" button twice. To unmute, press the "function" button twice again.
- - Note: The volume controls only adjust the volume output by the controller, and not the volume level of the Nintendo Switch 2 OS. Adjust the Nintendo Switch 2 OS volume in the device settings.

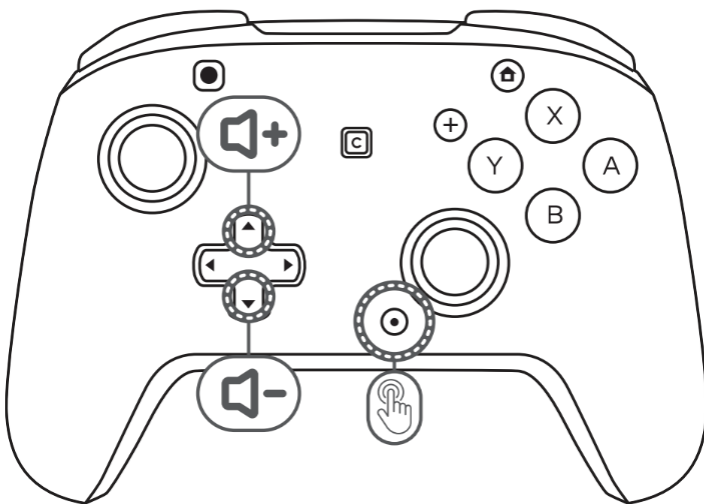

Program Back Buttons

- A. To program the back buttons, hold the "function" button and press the button you'd like to map a control to. Once the LED is flashing, press any button on the controller to map that button's function to the back. The LED will blink quickly 3 times, indicating successful programming.

  
- B. To clear a mapped function or disable the back buttons completely, hold down the “function” button and double press any back button.

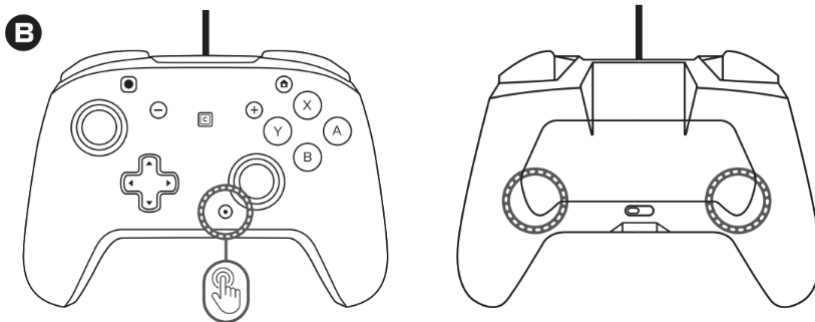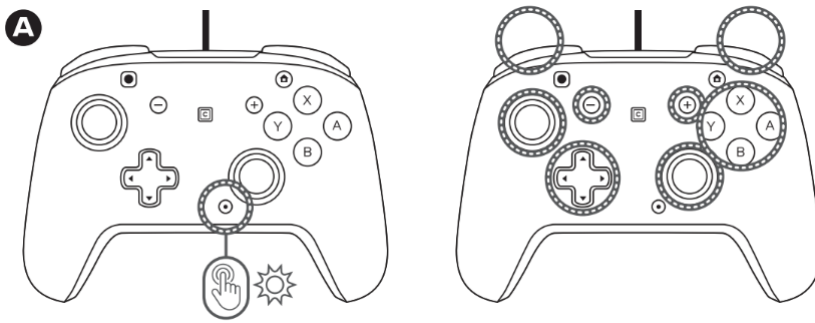

Light Modes

To cycle through the light modes, hold down the function button and press either L or R.

 
- Mode 1- The LEDs are on and set to your color.
- Mode 2 - The LEDs fade in and out to set color.
- Mode 3 - The LEDs will cycle through all colors.
- Mode 4 - The LEDs will react to the movement of the sticks.

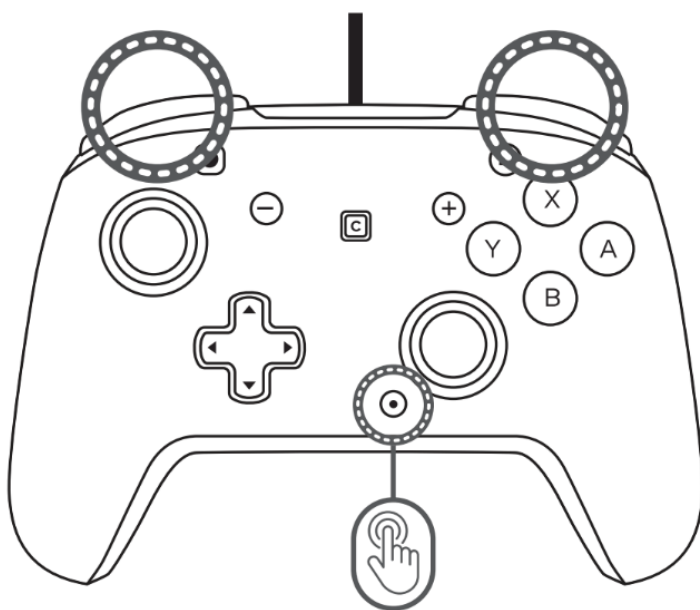

Audio Setup and Control Volume


Audio Setup

 - A. Plug the 3.5mm jack of your headset or headphones directly into the 3.5mm port on the controller.
 - Note: The Nintendo Switch 2 only supports one audio output at a time. When connecting your headset/headphones into the controller, audio via HDMI connected devices (i.e. TV, amp, etc.) will be disabled. When connecting more than one USB audio device, only the first device will have audio output.
- B. You will be prompted by the Nintendo Switch 2 to reconnect the controller. Press L and R to connect and then audio will start playing through the headset/headphones.
- C. If you do not hear sound after reconnecting your controller, please go to the Nintendo Switch 2 OS settings to make sure the volume is above 0%.
 - Note: Under the System Settings, there's an audio setting called "Mute when Headphones are Disconnected" that can be enabled. When activated, this option will shut off the system speakers when unplugging or disconnecting a headset until the volume buttons are pressed, or until this setting is manually turned off. To disable this setting manually, select System Settings > System > Mute when Headphones are Disconnected (turn to off).

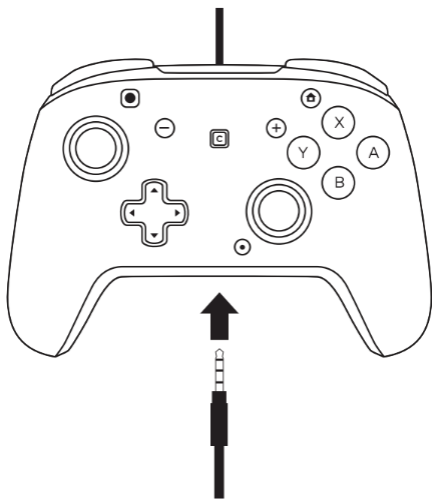

Control Volume

 - A. To adjust the controller's volume, hold down the "function" button and press the Up/Down on the D-pad. You can easily mute your connected headset/headphone's mic by pressing the "function" button twice. To unmute, press the "function" button twice again.
 - - Note: The volume controls only adjust the volume output by the controller, and not the volume level of the Nintendo Switch 2 OS. Adjust the Nintendo Switch 2 OS volume in the device settings.

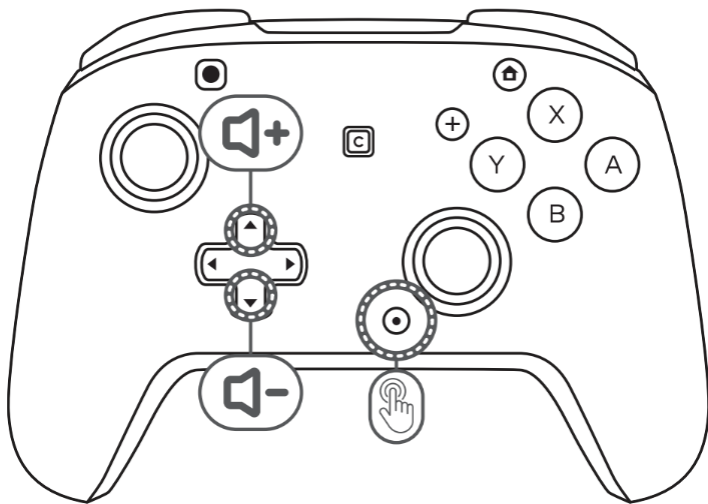


Program Back Buttons


Program Back Buttons

- To program the back buttons, hold the “function” button and press the button you’d like to map a control to. Once the LED is flashing, press any button on the controller to map that button’s function to the back. The LED will blink quickly 3 times, indicating successful programming.
- To clear a mapped function or disable the back buttons completely, hold down the “function” button and double press any back button.

 A

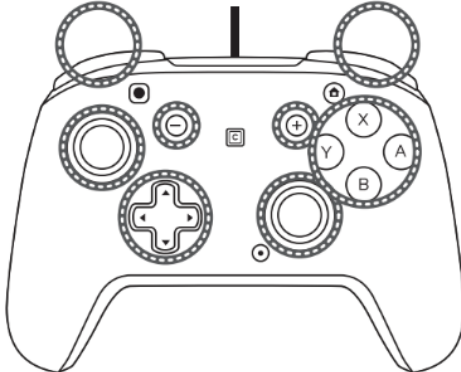


B

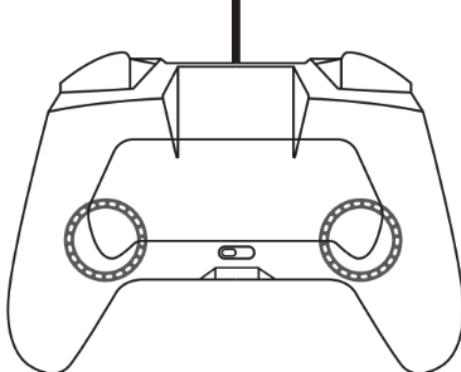 

Switch 2 Afterglow Wired Controller - Light Modes

Light Modes -To cycle through the light modes, hold down the function button and press either L or R.

 - Mode 1- The LEDs are on and set to your color.
- Mode 2 - The LEDs fade in and out to set color.
- Mode 3 - The LEDs will cycle through all colors.
- Mode 4 - The LEDs will react to the movement of the sticks.

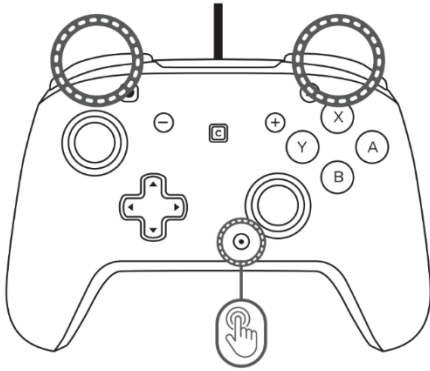

Nintendo Switch™ 2 C Button Compatibility

GameChat, a brand-new feature on the Nintendo Switch™ 2 system, lets a group of up to 12 people chat while playing games.

- You can share your screen in real time, even if you're playing different games! Whether you're sharing an in-game discovery or just waving hello, GameChat makes it feel like your friends are right there next to you.
- Maximum of 12 participants for voice chat. Up to four people can share their game screen or take part in video chat simultaneously. GameChat only available on Nintendo Switch 2.

How to use GameChat with a controller that is compatible with Nintendo Switch™ 2:

- After setting up GameChat, simply press the C Button on your controller to open the GameChat menu on your controller and the GameChat settings will open up.

How to use GameChat with a controller that works on Nintendo Switch™ 2 (does not have C Button):

- After setting up GameChat, you can press the HOME button on your controller and you can find the GameChat menu on the HOME screen. GameChat is included with any Nintendo Switch Online membership.

For more details and further support on GameChat, please check the [GameChat Guide and FAQ site from Nintendo](#).

